 
 
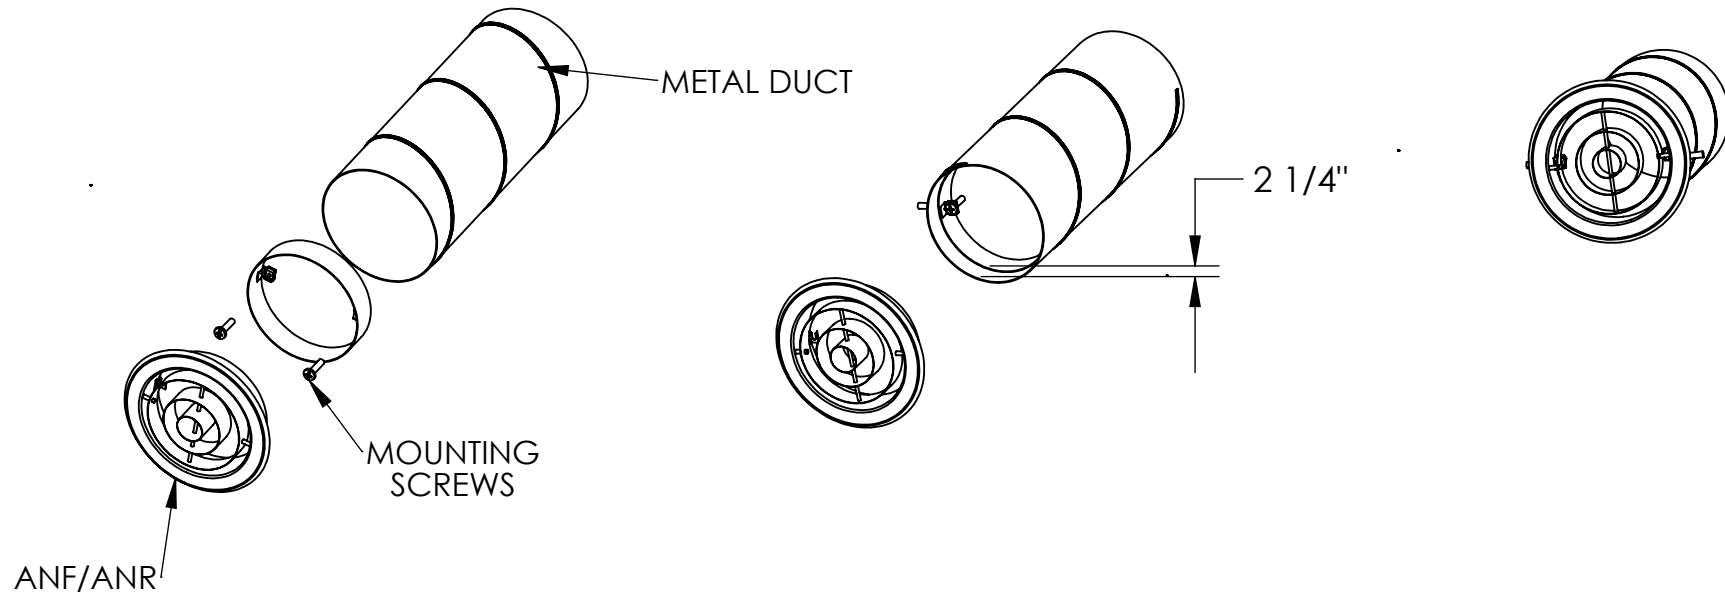 


Concealed Mounting Ring

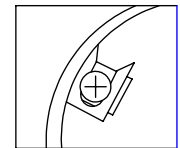

1. Insert the concealed mounting ring into the duct.
2. Fasten the concealed mounting ring into the duct using the mounting screws.
3. Insert the ANF/ANR into the concealed mounting ring. Rotate the ANF/ANR until it locks into the place. The "U" tabs should fit around the tightening screws.
4. Tighten using a Phillips screw driver.

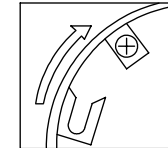

Note: Standard on sizes 6"-24" mount with provided concealed mounting ring.

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AIRCONCEPTS, INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AIRCONCEPTS, INC IS PROHIBITED.




		UNLESS OTHERWISE SPECIFIED:		NAME	DATE
		DIMENSIONS ARE IN INCHES TOLERANCES: ± 1/32" FRACTIONAL	DRAWN	M.H.	03-22-05
		ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±	CHECKED		
			ENG APPR.		
			MFG APPR.		
		INTERPRET GEOMETRIC TOLERANCING PER:	Q.A.		
		MATERIAL	Note: Sizes 6"-16" Mount with Provided Concealed Mounting Ring		
NEXT ASSY	USED ON	FINISH			
APPLICATION		DO NOT SCALE DRAWING			



ANF/ANR INSTALLATION

SIZE A	DWG. NO.	REV
SCALE: 1:12	WEIGHT:	SHEET 1 OF 1

   EZ Fastener Installation-Requires access behind mounting surface

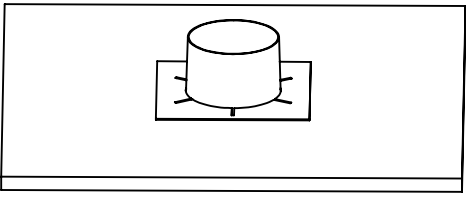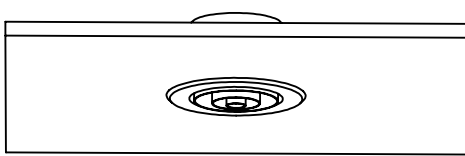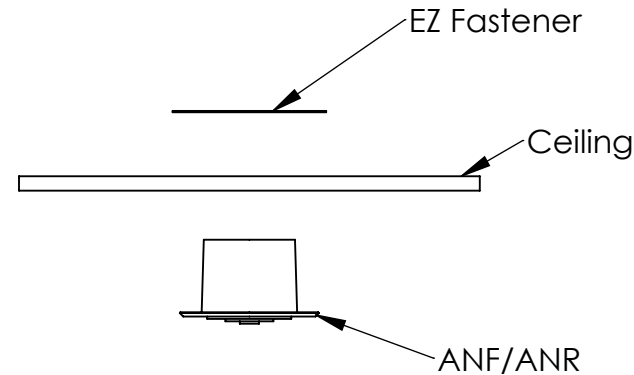

Note: Standard on sizes 3"-5"
Mount with provided concealed EZ Fastener
Optional on sizes 6"-24"

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
AIRCONCEPTS, INC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
AIRCONCEPTS, INC IS
PROHIBITED.


		UNLESS OTHERWISE SPECIFIED:		NAME	DATE
		DIMENSIONS ARE IN INCHES	DRAWN	M.H.	06-03-10
		TOLERANCES: $\pm 1/32"$	CHECKED		
		FRACTIONAL	ENG APPR.		
		ANGULAR: MACH \pm BEND \pm	MFG APPR.		
		TWO PLACE DECIMAL \pm	Q.A.		
		THREE PLACE DECIMAL \pm			
		INTERPRET GEOMETRIC			
		TOLERANCING PER:			
		MATERIAL			
NEXT ASSY	USED ON	FINISH			
APPLICATION		DO NOT SCALE DRAWING			





ANF/ANR Installation Instruction

SIZE	DWG. NO.	REV
A		
SCALE: 1:10	WEIGHT:	SHEET 1 OF 1

 Flex Duct Mounting Ring (FDMR)

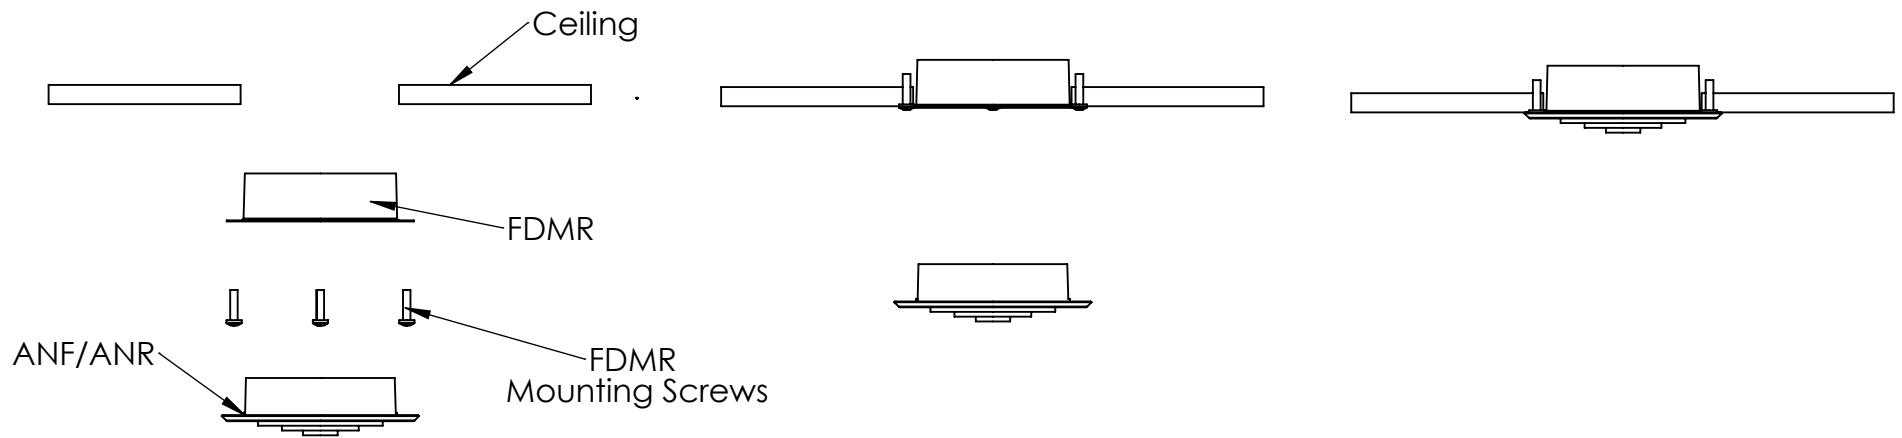

  
1. Insert the FDMR into the ceiling.
2. Fasten the FDMR into the ceiling using the mounting screws.
3. Insert the ANF/ANR into the FDMR. Rotate the ANF/ANR until it locks into the place. The "U" tabs should fit around the tightening screws.
4. Tighten using a Phillips screw driver.

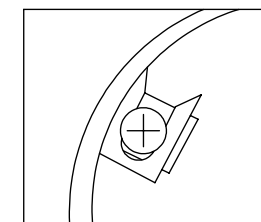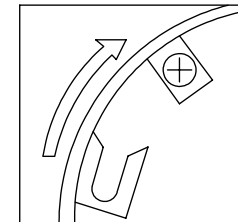

Optional on sizes 6"-24'

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AIRCONCEPTS, INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AIRCONCEPTS, INC IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:		NAME	DATE	<div> AirConcepts AIR DISTRIBUTION PRODUCTS</div>		
		DIMENSIONS ARE IN INCHES TOLERANCES: $\pm 1/32"$ FRACTIONAL ANGULAR: MACH \pm BEND \pm TWO PLACE DECIMAL \pm THREE PLACE DECIMAL \pm	DRAWN	M.H.	10/29/14			
			CHECKED					
			ENG APPR.					
			MFG APPR.					
		INTERPRET GEOMETRIC TOLERANCING PER:	Q.A.			ANF/ANR Instalation Instruction		
		MATERIAL	COMMENTS:					
NEXT ASSY	USED ON	FINISH				SIZE A	DWG. NO.	REV
APPLICATION		DO NOT SCALE DRAWING				SCALE: 1:10	WEIGHT:	SHEET 1 OF 1